



# PA Primo Alu


## Primo System PA05 - Faste karme fals ud

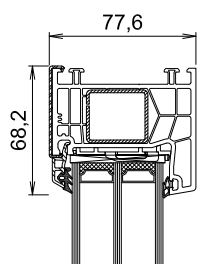



L1 (01)=  
A597/76101(V309) - T-2000586

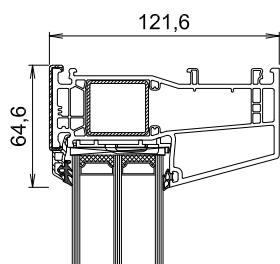


L1 (02) =  
A599/76107(V381) - T-2000586

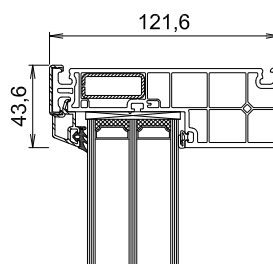


L1 (03)=  
A555/76122(V312) - T-2000064

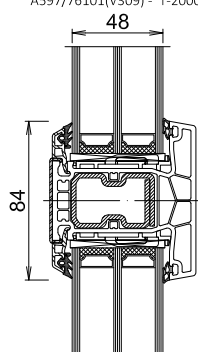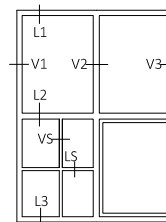


L2, LS (01 - 02)=  
T-2000181/76302(V343 - V319) - T-2000586

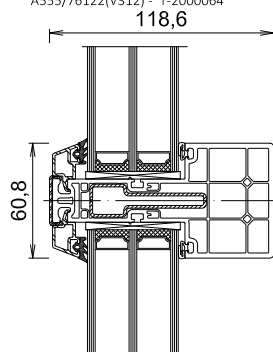


L2, LS (03) =  
A556/76318(V558) - T-2000064

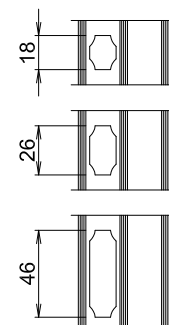


LS =  
ilagt sprosse 18 mm, 26 mm, 46 mm

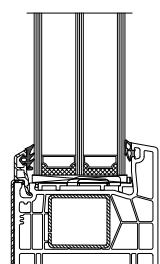


L3 (01) =  
A597/76101(V309) - T-2000586

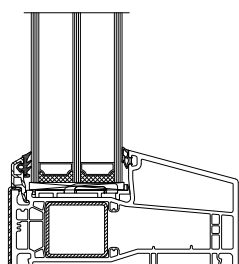


L3 (02) =  
A599/76107(V381) - T-2000586

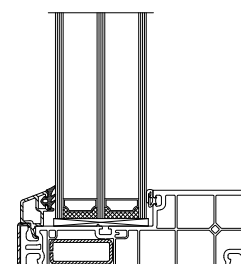

L3 (03)=  
A555/76122(V312) - T-2000064

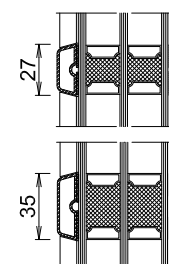


LS =  
27 mm (A244T, 92001), 35 mm (A246T, 92003)

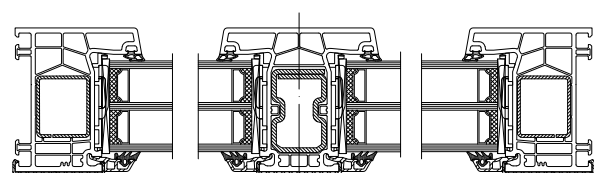


V1 (01)=  
A597/76101(V309) - T-2000586

V2, VS (01 - 02) =  
T-2000181/76302(V343 - V319) - T-2000586


V3 (01)=  
A597/76101(V309) - T-2000586

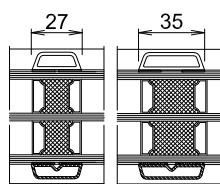


VS =  
27 mm (A243T, 92000), 35 mm (A245T, 92002)

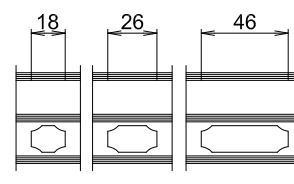


VS =  
ilagt sprosse 18 mm, 26 mm, 46 mm

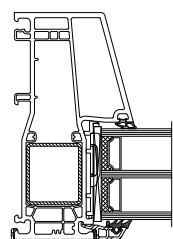

V1 (02)=  
A599/76107(V381) - T-2000586

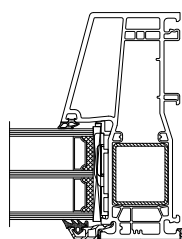

V3 (02)=  
A599/76107(V381) - T-2000586

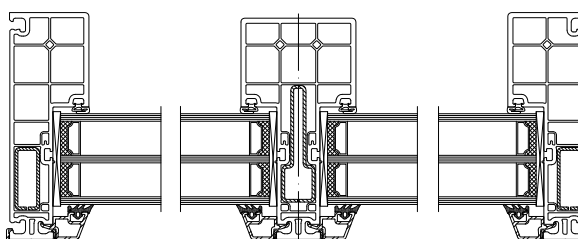

V1 (03)=  
A555/76122(V312) - T-2000064

L2, LS (03) =  
A556/76318(V558) - T-2000064

L3 (03)=  
A555/76122(V312) - T-2000064