



PP Primo Plast



Primo System PP00 - Faste karme fals ind

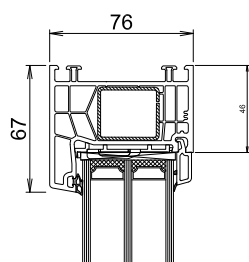


L1 (01) =
76101(V309) - 76509

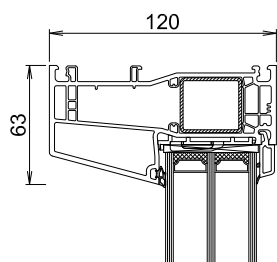


L1(02) =
76107(V381) - 76509

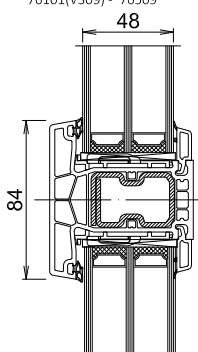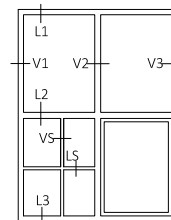


L2, LS =
76302(V343 - V319) - 76509





LS =
ilagt sprosse 18 mm, 26 mm, 46 mm

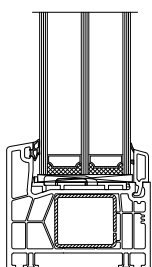


L3 (01) =
76101(V309) - 76509

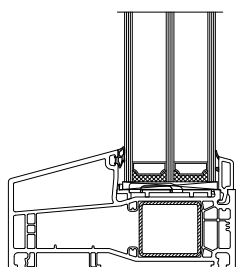


L3 (02) =
76107(V381) - 76509

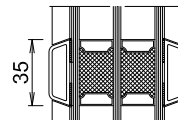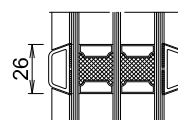


LS =
27 mm (92001), 35 mm (92003)

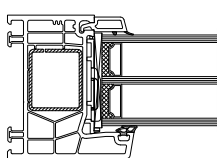


V1 (01) =
76101(V309) - 76509

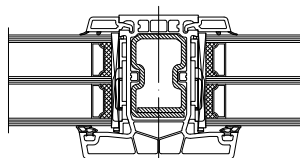


V2, VS =
76302(V343 - V319) - 76509

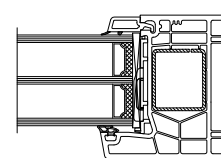


V3 (01) =
76101(V309) - 76509

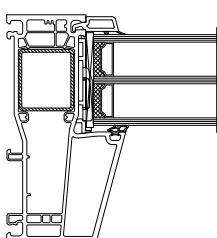


V1(02) =
76107(V381) - 76509

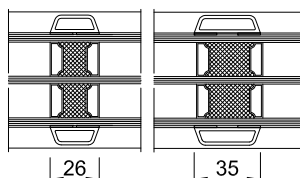

VS =
27 mm (92000), 35 mm (92002)

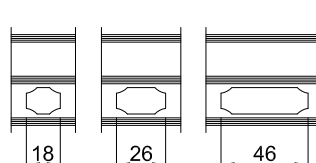

VS =
ilagt sprosse 18 mm, 26 mm, 46 mm

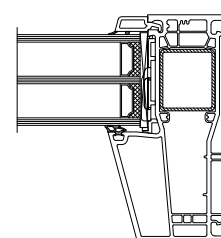

V3 (02) =
76101(V309) - 76509