





L20 =  
76107(V381) - 76200(V315) - 76509

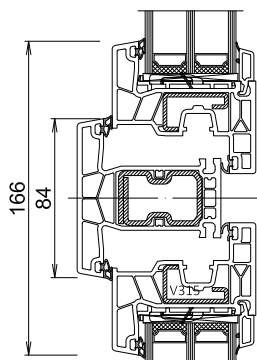


L4 =  
76200(V315) - 76302(V319) - 76200(V315) - 76509

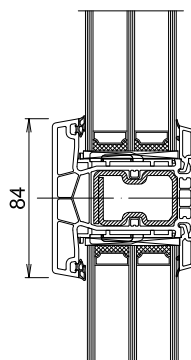


L6 =  
76302(V319) - 76509

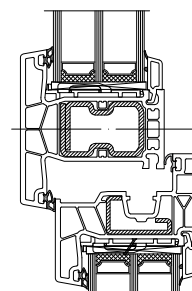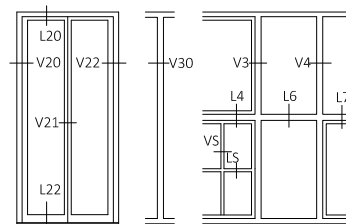


L7 =  
76302(V319) - 76509 - 76200(V315) - 76509

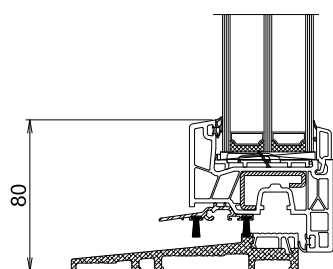


L22 =  
Z188/A061 - 76200(V315) - 76509

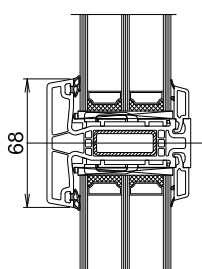


LS, VS =  
76300(V312) - 76509

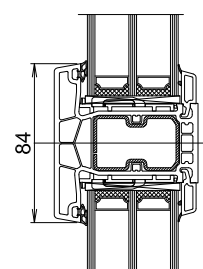

LS, VS =  
76302(V343) - 76509

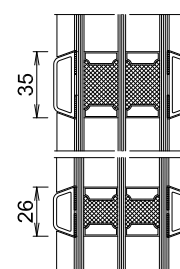


LS =  
26 mm (92001), 35 mm (92003)

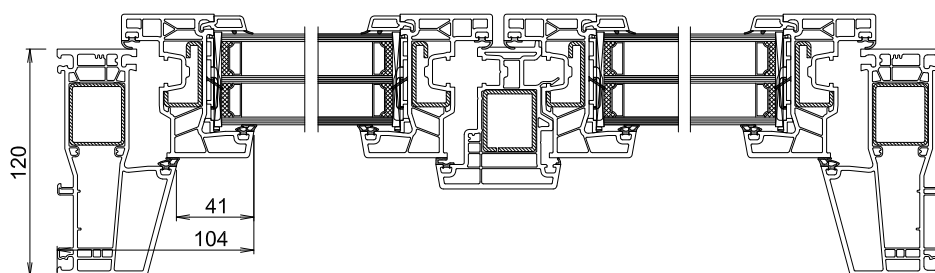


V20 =  
76107(V381) - 76200(V315) - 76509

V21 =  
76200(V315) - 76509 76402 (V310) 76200(V315) - 76509

V22 =  
76107(V381) - 76200(V315) - 76509

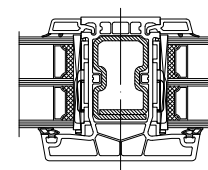


V30 =  
76302(V315) - 76509

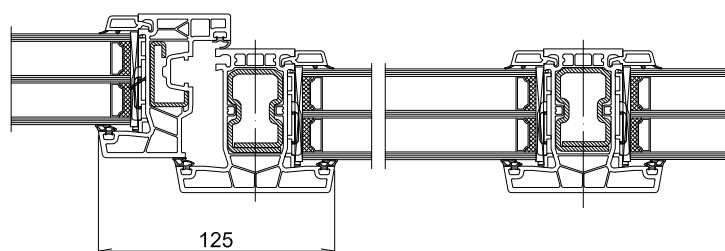


V3 =  
76200(V315) - 76302(V319) - 76509

V4 =  
76302(V315) - 76509

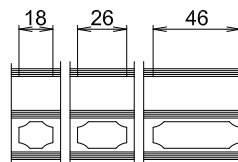

LS, VS =  
ilagt sprosse 18 mm, 26 mm, 46 mm

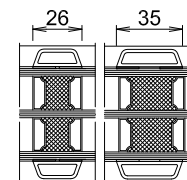

VS =  
27 mm (92000), 35 mm (92002)