




L20 =
76107(V381) - 76205(V326) - 76509

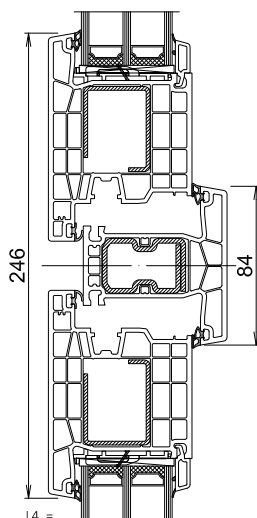


L4 =
76205(V326) - 76302(V319) - 76205(V326) - 76509

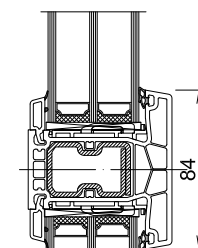


L6 =
76302(V319) - 76509

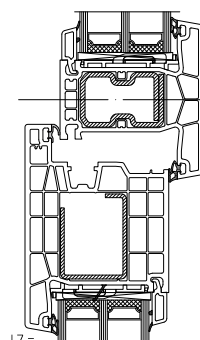


L7 =
76302(V319) - 76205(V326) - 76509

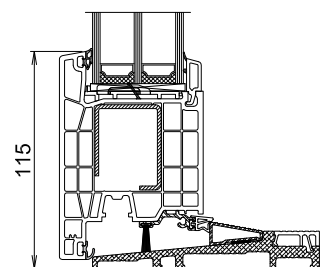


L22 =
Z188/A574/A581 - 76205(V326) - 76509

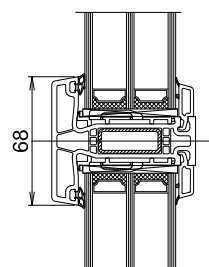


LS, VS =
76300(V312) - 76509

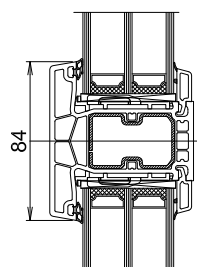


LS, VS =
76302(V343) - 76509

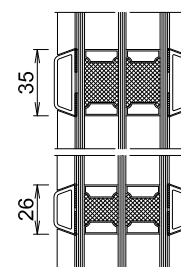


LS =
26 mm (92001), 35 mm (92003)

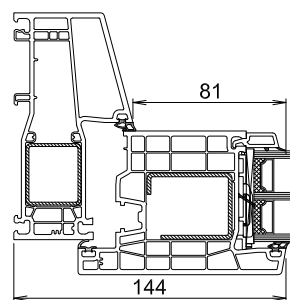

V20 =
76107(V381) - 76205(V326) - 76509

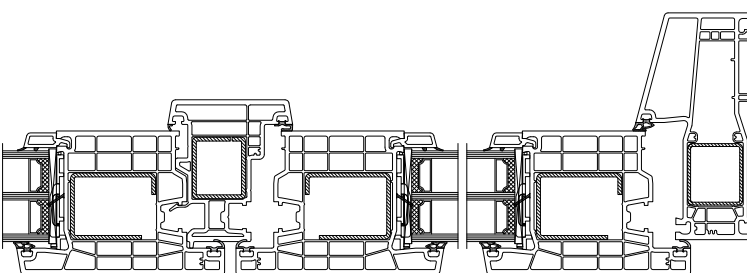


V21 =
76205(V326) - 76509 76402 (V310) 76205(V326) - 76509

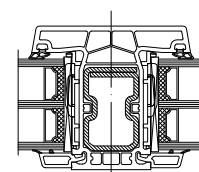


V22 =
76107(V381) - 76205(V326) - 76509


V30 =
76302(V315) - 76509

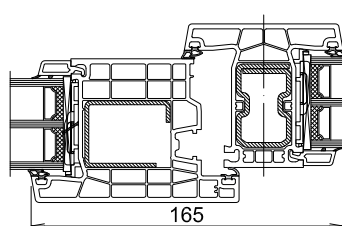


V3 =
76205(V326) - 76302(V319) - 76509

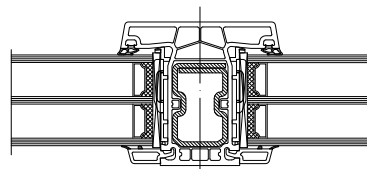

V4 =
76302(V315) - 76509

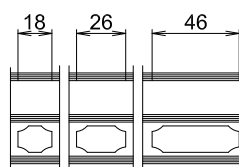

LS, VS =
ilagt sprosse 18 mm, 26 mm, 46 mm

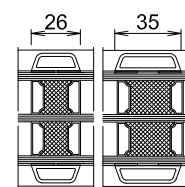

VS =
27 mm (92000), 35 mm (92002)