




L20 =
76101(V309) - 76207(V260) - 76509

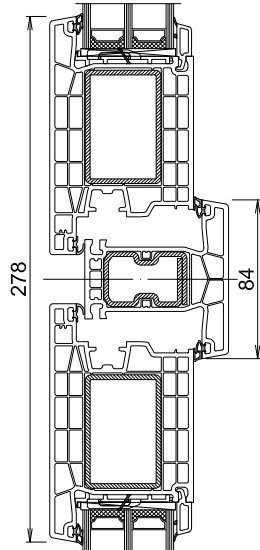


L4 =
76207(V260) - 76302(V319) - 76207(V260) - 76509

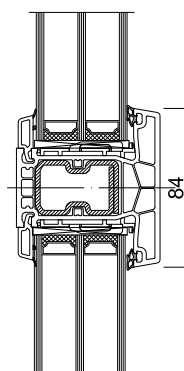


L6 =
76302(V319) - 76509

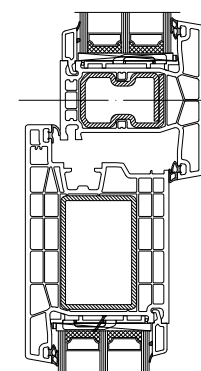


L7 =
76302(V319) - 76207(V260) - 76509

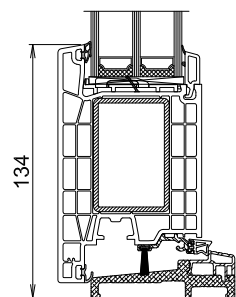


L22 =
Z187/A573/A581 - 76207(V260) - 76509

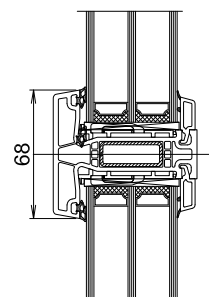


LS, VS =
76300(V312) - 76509

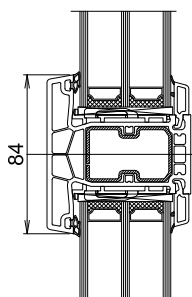


LS, VS =
76302(V343) - 76509

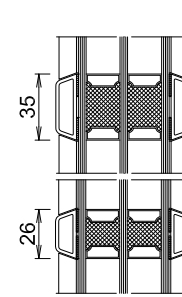

LS =
26 mm (92001), 35 mm (92003)

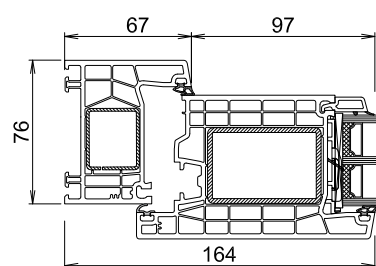


V20 =
76101(V309) - 76207(V260) - 76509

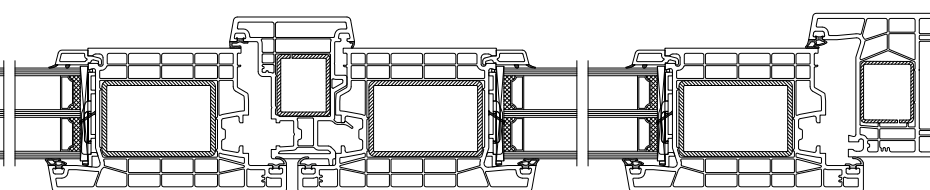


V21 =
76207(V260) - 76509 76402 (V310) 76207(V260) - 76509


V22 =
76101(V309) - 76207(V260) - 76509

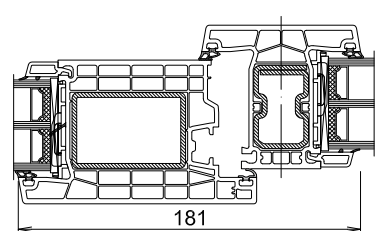


V3 =
76207(V260) - 76302(V319) - 76509

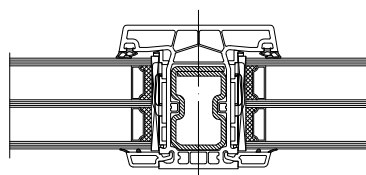

V30/V4 =
76302(V315) - 76509

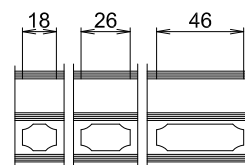

LS, VS =
ilagt sprosse 18 mm, 26 mm, 46 mm

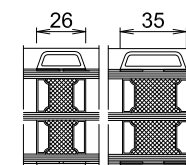

VS =
27 mm (92000), 35 mm (92002)